
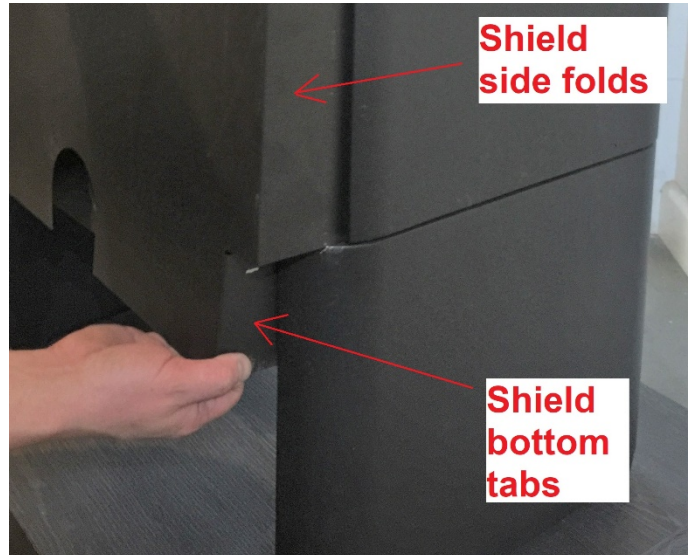


# HERGOM E40


## Installation of the Heatshield.

1. At the widest part of the heatshield, it has return folds, which are to slot in between the rear Cast panel of the heater and the side Cast Iron panel. The bottom folds or tabs, slot between the legs and the rear panel. See pic.

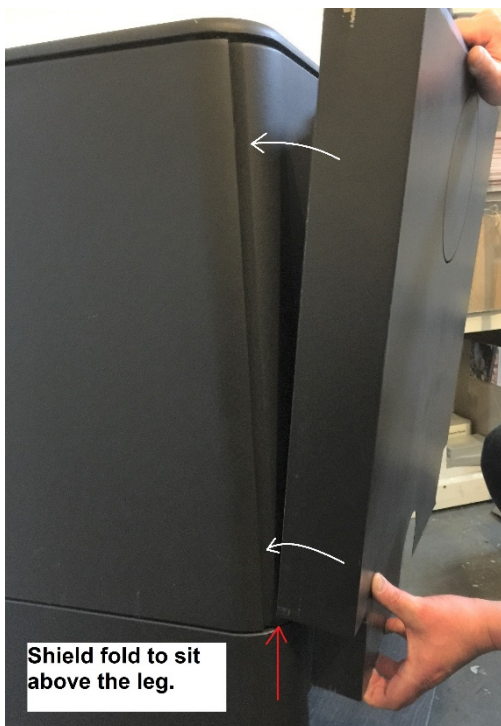

2. Doing one side at a time, make sure the bottom of this fold is aligned above the top of the Cast Leg, and below the bottom of the Heater cast top. Push the heatshield slightly so it catches in this gap.

3. Then before going any further, align the bottom folded tab so it will insert between the cast leg and the cast back panel. Then tap the heatshield on this side edge so it is slightly inserted into the gap. Don't push in too far until the other side is inserted.

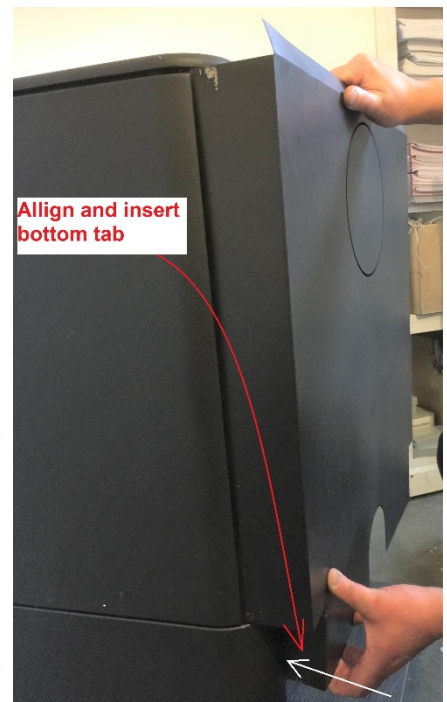

4. Do the same on the opposite side of the heater, aligning the fold with the gap in the fire body, and then aligning the tab with the gap next to the leg, as per the first side.



5. Once aligned, hit the heatshield with the palm of your hand until it is secured into position. The air gap between the vertical heatshield and the back of the heater should be 25mm (ie not counting the tapered fold at the top).