

hergom


Glance L Rear Additional Heat Shield For tested Rear clearance of 300 or 175mm

Reduces rear clearance from 400mm to:

**300mm, when fitted with a solid 8" flue shield, or
175mm, when fitted with a solid 8" flue shield and a deflector
included between the 6" active and the outer flue shield, for the
first 900mm.**

Included:

- 1 x heatshield
- 3 x M6x35mm Screws
- 3 x 25mm spacers

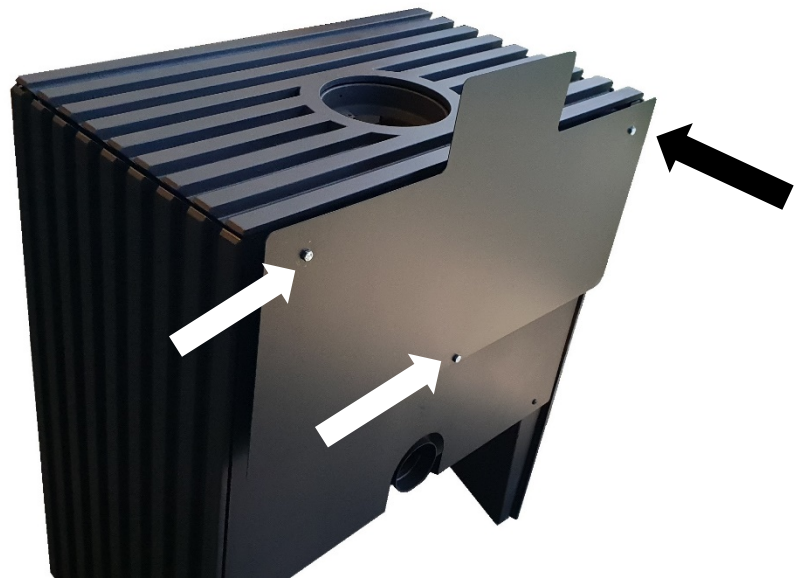

The Glance existing back panel is held into position with 5 bolts. Remove the 2 top bolts and the centre one. (The bottom 2 bolts will hold the back panel in position temporarily).

Then fix the additional shield using the longer M6 Bolts, inserting the bolts through the heatshield and the 25mm spacers provided. Align the Don't fully tighten the bolts until all three are aligned and inserted, then fully tighten.

The additional flue shield deflector must be added between shield and active flue, for the first 900mm of flue, as per shield manufacturer's instructions.