



Addendum to CLARE 60VT

ZERO CLEARANCE BOX INSTRUCTIONS

PLEASE READ THIS FIRST !


**Amendment to be used in conjunction with the Installation Manual
for the ADF CLARE MODELS and ZCB installation.**



Supplied by:
Castworks Pty Ltd
12a Fiveways Blvd
Keysborough VIC 3173

Step 1.

Before fitting the top panel to the Zero Clearance box, an extra shield needs to be fitted to the underside of the top panel, directly behind the front fold on the top panel.

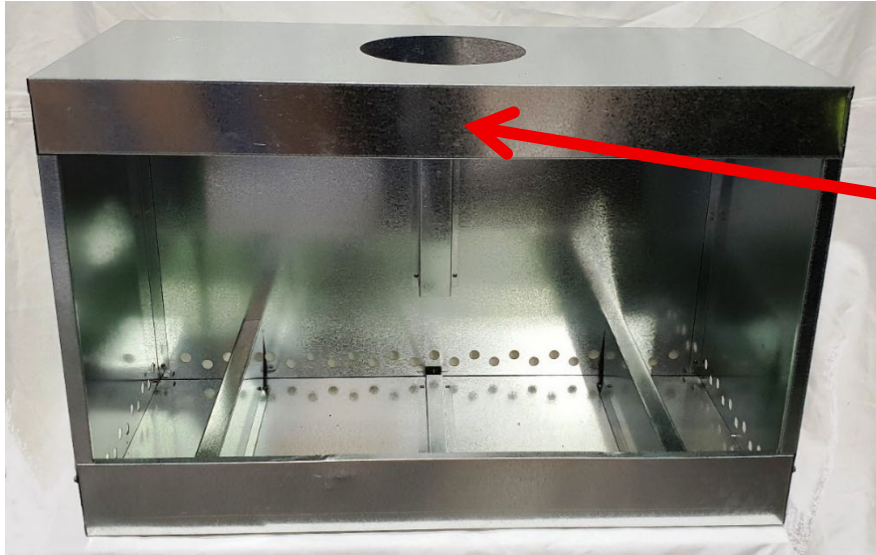

**Behind
Here**

Turn the top panel upside down to fit:

Centre the shield in front of the flue hole, with the fold pushed towards the front of the top panel; mark the hole positions.



Drill a small pilot hole to make it easier to start or just use the self-tapping metal screws to cut the hole, and fix the shield into position as shown on the left. Holes are marked on top to aid locating for pilot holes.